

MA101

Luxury Multifunctional Massage Chair



Reserved 20200415001

The company reserves the right to improve the product and manual, No more notice would happen if there is any modification.

This manual is a general version, and the appearance and function of the product are subject to the actual product;

This booklet has been carefully checked, but it does not rule out that there may be printing errors or omissions or misunderstandings in the content. Please understand, the company reserves the right of interpretation.



Improper disposal of waste may cause environmental pollution



Name and content of hazardous substances

Part Name	hazardous substances					
	Pb	Hg	Cd	Cr	PBB	PBDE
Shell	○	○	○	○	○	○
circuit board assembly※	×	○	○	○	○	○
Metallic parts	×	○	○	○	○	○
Rubber parts	○	○	○	○	○	○
Powercord/adapter	×	○	○	○	○	○
Internal signal cable	○	○	○	○	○	○
leather	○	○	○	○	○	○

This form is prepared in accordance with the provisions of SJ/T11364

※: The circuit board assembly includes the components of the printed circuit board machine, such as resistors, capacitors, integrated circuits, connectors, etc.

○: Indicates that the content of the hazardous substance in all homogeneous materials of this part is below the limit requirement specified in GB/T 26572.

×: Indicates that the content of the hazardous substance in at least one hazardous material of the part exceeds the limit requirement specified in GB/T 26572.

Environmental protection use period

This electronic and electrical product is used under the conditions of use described in the manual, and the harmful substances or elements contained in it will not leak, and will not cause pollution to the environment or cause serious damage to people and property. The period is 10 years.



CATALOG

Safety Precautions	1
Device name and function	2
Appearance Structure	3
Internal structure	3
Controller	4
Controller button	5
Features	6
Preparation Before Use	7
Install Controller Component	7
Other components	7
Installation Location	8
Floor protection	8
Surrounding	8
Ground	8
Move method	9
Power on	9
Debugging	10
Before seated	10
Calf lift and retraction	11
After use	11
Product Care and Storage	12
FAQ	13
Product Specification	14



Safety Precautions





Before use, please read this “Safety Precautions” carefully and use it correctly. The precautions indicated here will help you use this product safely and correctly.

In order to clearly indicate the degree of harm and damage, the precautions are divided into “Warning” and “Caution” indicating the possible damage caused by wrong use. Both are important contents related to safety, please be sure to observe them.

1 Safety Precautions


Before use, please read this "Safety Precautions" carefully and use it correctly. The precautions indicated here will help you use this product safely and correctly.

In order to clearly indicate the degree of harm and damage, the precautions are divided into "Warning" and "Caution" indicating the possible damage caused by wrong use. Both are important contents related to safety, please be sure to observe them.


 Warning	Indicates that incorrect use may result in serious injury to the user.		
 Note	Indicates that misuse may result in injury or material damage to the user.		
	Indicates prohibited to use		Indicates disassembly is prohibited.

Persons who are not suitable to use this product


If you have the following symptoms, please consult a doctor first, and use it under the guidance of a doctor

 Warning	<ul style="list-style-type: none">◆ Those who use medical electronic devices such as pacemakers that are embedded in the body.◆ Those who are in medical treatment, especially those who feel abnormal.◆ Patients with malignant tumor, acute disease, heart disease, severe hypertension, etc. (need to be supervised by a normal person)◆ Pregnant women or those who are in menstruating.◆ Osteoporosis, vertebral fracture patients.◆ People with skin wounds and people who need to rest in peace.◆ People whose body temperature is above 38 degrees (fever period).◆ The product is heated, people who are not sensitive to heat must pay attention when using it. (need to be supervised by a normal person)◆ The mentally handicapped or minors must use it under the supervision of a normal person.
--	--

Controller Notes

 Controller Notes	<ul style="list-style-type: none">◆ Do not operate the controller with wet hands or pull the wires of the controller forcibly.◆ Do not splash water on the controller to avoid function failure.◆ Do not place heavy objects on the controller.
---	---

About the power plug and power cord

 Notice	<ul style="list-style-type: none">◆ Do not use a power supply other than the rated voltage to avoid fire or damage to the product.◆ Do not plug or unplug the power cord with wet hands to avoid electric shock.◆ When unplugging the power cord, hold the plug of the power cord instead of the wire.◆ The power cord should not be squeezed by the product or other heavy objects.◆ Do not damage, damage, excessively bend, pull, twist or knot the power cord.◆ When the power cord is damaged, please do not disassemble and replace it without permission, but contact the dealer or qualified professionals for replacement and repair.
---	---


Product technical parameters common problems and solutions / use environment

2


Specifications

Name	Smart massage chair	Rated frequency	50-60HZ
Type	MA101	Rated power	120W
Rated voltage	110V-220V	Safety design	I Class
Executive standard	GB 4706. 1-2005 GB 4706. 10-2008		





Common problems and solutions

NO.	DESCREPTIO	Possible reason	Approach
1	There is a boom "click" sound during the action	The normal sound when the materials working normally or the sound of friction between the massage ball and the Cloth cover	No processing required
2	Can not boot	The power plug is not inserted properly	Plug in the power plug
		Power switch not turned on	Put the power switch in the "on" position
		The fuse of the massage chair is damaged	If damaged, replace the fuse
3	No sound from speakers	Volume turned to lowest	Turn up the volume
4	The backrest frame or the calf massage frame can-not be raised and lowered	Excessive pressure on the back and calf massage stand	Reduces pressure on the back or calf massage stand
If there is still abnormal phenomenon after the above treatment, please contact the local dealer for maintenance.			
 NOTE		Tip: Do not disassemble and repair the product without authorization. Our Company is not responsible for any damage to the product or personal injury caused by this! Thank you for your cooperation	

 
Use environment

 NOTE	<ul style="list-style-type: none">◆ Do not use this product in an environment where the room temperature is higher than 40°C.◆ Do not use he product in a hurried on dusty environment to avoid electric shock and machine failure.◆ Do not use it when struck lightning and pull the power plug out and the power socket.◆ Please place the product on the flat ground for use.◆ Do not place the product outdoor.◆ Do not place the massage chair near a stove or in direct sunlight.
---	--


Matters needing attention when using

 Note	<ul style="list-style-type: none"> ◆ This product is only for those who weigh less than 120kg. ◆ Do not use other therapeutic equipment while using this machine. ◆ Do not use for therapeutic purposes. ◆ This product can only be used by one person, please do not use it by two or more people at the same time. ◆ Do not use immediately after meals to avoid discomfort. ◆ It is recommend to use this product for 20 minutes each time. ◆ When using the product, do not put mobile phones and other valuables in your pockets, and remove the accessories on your arms. ◆ Before use, please lift the back pad to confirm whether the fabric of the backrest and other parts is damaged. If there is damage, please stop using it immediately and entrust it for repair in time. ◆ If your body appears or feels abnormal during use, please stop using it immediately and consult a doctor. ◆ When adjusting the back or calf angle, please make sure that there are no people or other obstacles behind the chair, and make sure that there is sufficient space before adjusting. ◆ When lowering the legs or backrest, be sure to prevent other excessive external forces from being applied to the legs or backrest, and be sure to confirm that there are no children or animals and other objects under the legs or backrest. ◆ Do not ride on the product to avoid injury or malfunction. ◆ Do not move the casters or push or pull the casters on easily damaged floors such as wooden floors and carpets.
 Prohibit	<ul style="list-style-type: none"> ◆ If the product is found to be damaged, broken, leakage and related parts exposed, it is forbidden to use it. ◆ It is forbidden to stand on the calf or squeeze other heavy objects on it. ◆ Do not allow children to use or play on the massage chair. ◆ Do not fall asleep on the product while the product is working. ◆ Do not use this product when you are drunk or unwell. ◆ Do not insert fingers or other object into the product gap to avoid injury or malfunction. ◆ It is forbidden to use if any abnormal conditions are found during use (such as smoke, odor, etc.)
 Disassemble is prohibited	<ul style="list-style-type: none"> ◆ Do not disassemble the internal components of the product without permission to avoid the possibility of machine failure. ◆ In addition to the repair technicians designated by the company, it is absolutely forbidden to disassemble, repair and modify the product. If you have any questions, please contact the dealer in time.
 Unplug	<ul style="list-style-type: none"> ◆ When performing maintenance, please unplug the power plug from the socket. Also, do not plug or unplug with wet hands, as this may result in electric shock and injury. ◆ After use or when not in use, please unplug the power plug from the socket. ◆ In the event of a power failure, immediately turn off the power switch and unplug the power plug from the socket.

Appearance

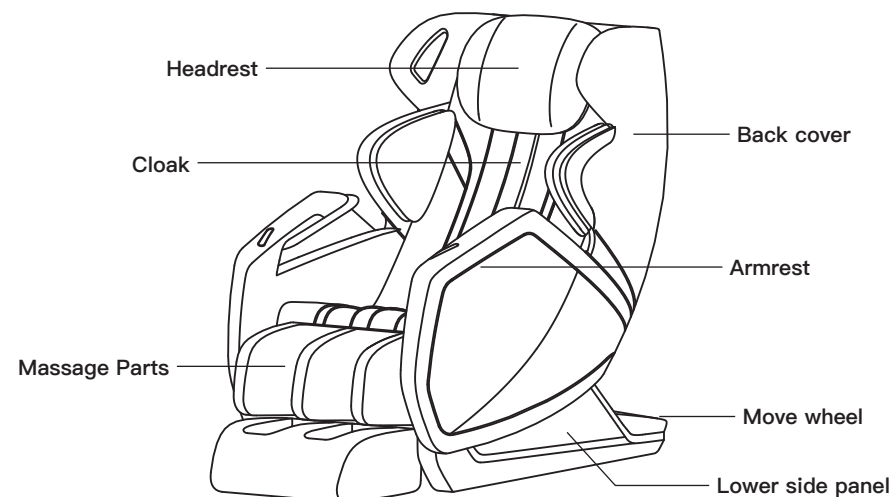

Internal structure

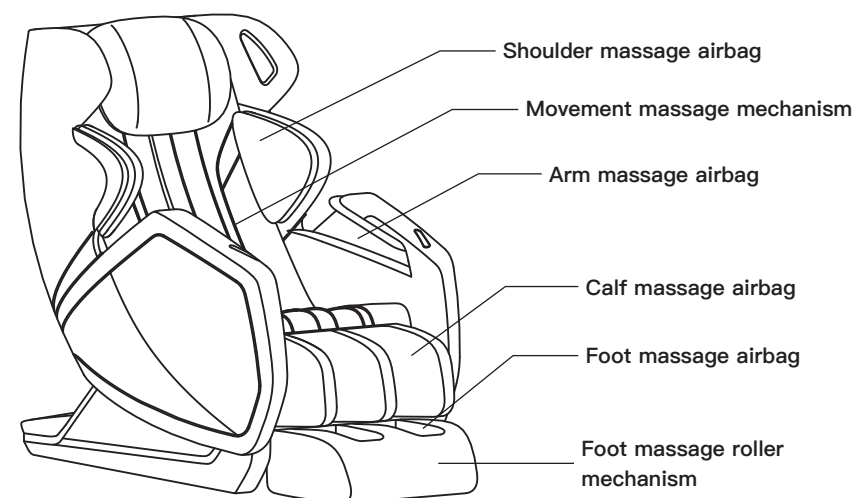 

Maintenance

- Please use a cotton cloth soaked in neutral detergent to wring and wipe the dirt on the plastic parts such as the back cover, armrest, calf massage stand, and air pipe, etc., and then wipe it carefully with a dry cloth .
- Dirt on the controller, power box or other parts, please wipe with a dry cloth.
- For the dirt on the back cushion and pillow cushion, please first wipe with a cloth dipped in neutral detergent, then wipe with a damp cloth, and finally put it in a ventilated place to dry naturally.
- For the dirt on the leg cloth cover, please open the zipper to remove the cloth cover, wash it with neutral detergent, and then re-install it in the calf plastic frame after drying.



NOTE

- When performing maintenance, be sure to unplug the power cord. Do not plug or unplug with wet hands to avoid electric shock and injury. When wiping the back cover, be careful to prevent detergent from entering the power box!
- Do not use corrosive cleaning agents such as benzene or thinner to clean the product, otherwise it may cause the product to fade, the structure of the massage chair to be corroded and cracked.
- Never iron product fabrics.

Storage method

- After removing the dirt and dust, if it is not used for a long time, please cover it with a dust cover (self-provided) to avoid dust.



NOTE

- Do not place the product in direct sunlight or high temperature places to avoid fading of the product lining.

Kind tips

In year-round use, be sure to check for the following symptoms:

- Burnt smell. ► Sometimes power is turned on after touching the wire, and sometimes it is turned off. The power cord is hot. ► Other exceptions



NOTE

- If the above phenomenon occurs, in order to prevent malfunctions and accidents, please stop using the massage chair.
- Turn off the power switch, unplug the power plug, and contact the dealer or our company where you purchased this product.
- In addition to the above-mentioned normal operation and maintenance, any repairs are carried out by the dealers or service agencies authorized by the company.

 


WARNING

When performing maintenance, be sure to unplug the power cord. Do not plug or unplug with wet hands, as this may result in electric shock and injury. The massage chair is strictly prohibited to be disassembled and repaired by the user. If there is any damage, please send it to a professional maintenance point for repair.

Calf lift and retraction

- The calf lift angle can be adjusted automatically by pressing the "Leg Up" or "Leg Down" button.

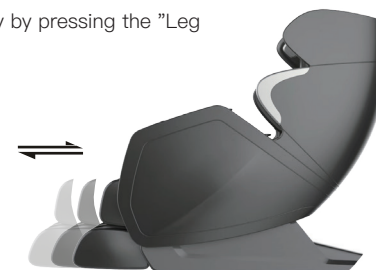

- The expansion and contraction distance of the calf spring is about 13 cm.



Warning

 
- Playing on the chair and improper operation are strictly prohibited.
- When adjusting the angle of the calf and the backrest part, make sure that there are no obstacles around the product.
- It is strictly forbidden to insert legs, feet or other objects into the gap of the chair when the lower leg part is raised and lowered. It is strictly forbidden to get up from the chair when the chair is reset.

After use

- After using the massage chair, please turn off the power switch and unplug the power plug from the power outlet. Place the controller on the controller bag.
- In order to avoid accidents caused by children accidentally starting the massage chair, the power switch should be turned off when the massage chair is not in use, and then the power plug should be unplugged from the power socket.
- If not in use for a long time, please store the massage chair.

Product Size

Size

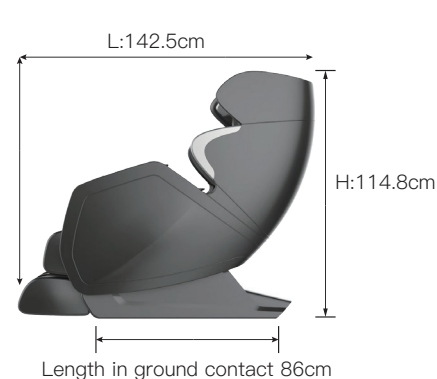

Front

 


Rail Structural Description

Massage chair upright size: L1425mm×W735mm×H1148mm

Reversed state size: L1742mm×W735mm×H855mm

Controller

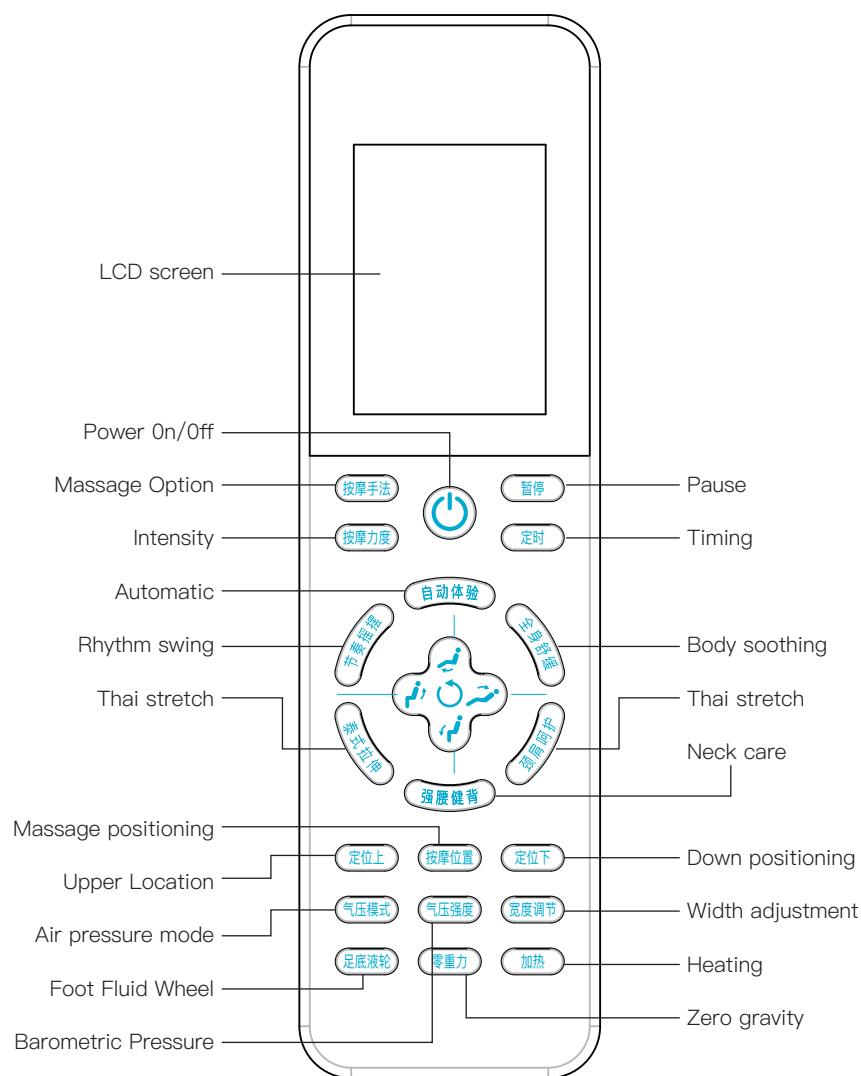

Controller button description

Power switch button: Turn on/off the massage function of the whole machine.

► In the power-on state, press this key to turn on the massage chair, and then select other keys (such as automatic program, massage technique, etc.) for massage experience.

► Press this key again to turn off the whole machine function and reset the massage chair.


Automatic program button: when this button is turned on. The massage chair has six automatic massage programs to choose from.

Automatic program	This automatic program has a light-to heavy, gentle approach to gradually soothe the body and reduce tension.
Body soothing	This automatic program has powerful grasping, pinching and body stretching movements, effectively stretching legs, waist and other parts.
Neck care	This automatic program mainly uses gentle manipulations to relieve body aches and restore physical strength.
Waist and back care	This automatic program relieves and relaxes muscles after exercise and improves the body's circulatory system.
Thai stretch	This program has the characteristics of all-round and high-strength, which can effectively stimulate the muscles, relax the tendons and activate the collaterals.
Rhythm swing	This program has the characteristics of gentleness and slowness, and can be rocked back and forth, high has the effect of helping sleep.
Massage Option	adjust the massage chair for manual massage (shiatsu, kneading, tapping and simultaneous kneading and tapping).
Upper positioning	Adjust the movement upwards in manual mode.
Down positioning	Adjust the movement downwards in manual mode.
Zero gravity	Adjust the massage chair to zero gravity.
Air pressure mode	Control the air pressure massage position of the massage chair.
Barometric	Adjust the air pressure size.
Pressure	Control the wide, medium and narrow range of the massage chair movement.
Width adjustment	Press and hold this key and the calf will automatically rise to the highest position; release the key and the calf will stop rising.
Up	Press and hold this key and the calf will automatically descend to the lowest position; release the key and the calf will stop descending.
Down	Press and hold this key and the backrest will automatically rise to the initial position of backrest; release the key and the backrest will stop rising.
Left	Press and hold this key and the backrest will automatically descend to the lowest position; release the key and the backrest will stop descending.
Right	Control of the massage chair, and adjust the speed of the roller.
Foot Fluid Wheel	Control the massage chair heating on/off.
Heating	Adjust the massage intensity in manual mode.
Massage intensity	Increase the massage time, five minutes at a time.

Machine debugging

► Use the controller to put the backrest frame to the limit position, raise the calf frame to the highest position and extend it to the longest position. Make sure that there is enough space around the massage chair before operation.

 ► After testing all functions, reset the massage chair completely and turn off the power switch.

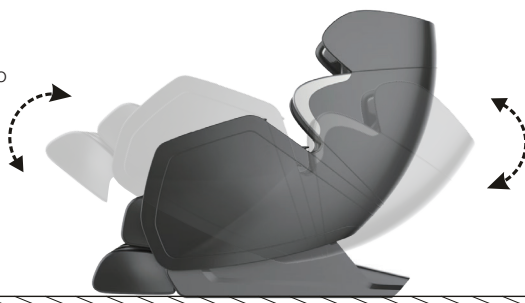

Before seated

► Make sure that the calf massage stand is connected and hung on the main unit of the product. Make sure all parts are back in place before sitting down. If you find that any part of the product is not returned, please turn on the power switch to fully return it.

 


NOTE

- Do not sit when the calf massage stand is raised.
- Do not suddenly put excessive pressure on the calf massage frame, otherwise the mechanism may be damaged.

Move method

- The bottom of the product is equipped with casters for easy movement. Raise the backrest as high as possible.
- Turn off the power switch and unplug it.
- When moving. Lift the front half of the product with the help of the handle under the front of the armrest, press the backrest with a person at the back, and then use the casters to move it to the desired position.

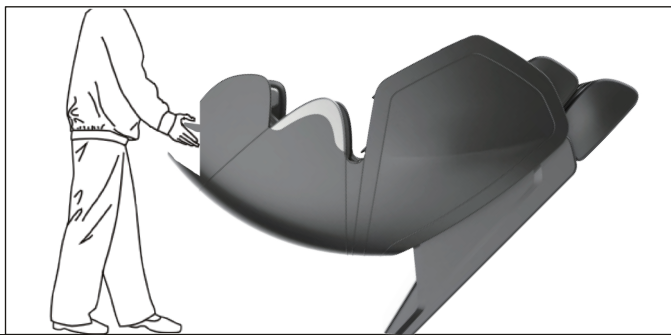

NOTE

- Do not move the product while it is carrying people.
- When moving the product, please hold the bottom of the product and the backrest to move it. (recommended at least 2 people)

 
Power on

- Insert the power plug into a well-grounded three-pin power outlet.
- Turn on the red rocker switch of the electric control box at the rear of the massage chair.



NOTE

- Before turning it on, make sure that the power cord and all exposed wires are not damaged.
- Be careful plugging in the power, please make sure the power switch of the massage chair is in the off position.

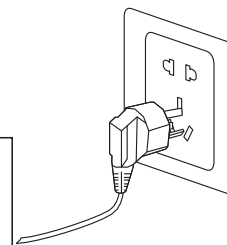

1. Forward function

The forward movement is 20CM, and there is a forward movement mechanism under the seat frame. Sitting on the chair in a natural and relaxed reclining state, the body pressure is completely released; the back and the seat frame are linked together to effectively save the space of the massage chair.

2. Zero gravity

According to the principle of the space capsule seat, the simulation technology is applied to the massage chair to create a completely relaxed, natural and comfortable massage posture, fully ergonomic design, so that the back, buttocks and feet can be synchronously tilted in the zero-gravity space capsule. In the leaning state, the person sitting on the chair is in the most relaxed leaning angle, and the body weight is absorbed by the massage chair, the body pressure is completely released, and the muscles of the whole body are completely relaxed, making you feel like entering a "zero gravity" state, so as to enjoy the "zero gravity" massage pleasure.

3. 2D massage movement

The innovatively designed 2D large-scale massage movement and walking mechanism are perfectly ergonomic.

4. Automatic elastic stretch calf

The automatic spring retraction function of the calf massage frame. Its expansion reaches 13 cm, which can meet the use of people of different heights.

5. Airbag massage

The product has multiple airbag massage functions (arms, shoulders, calves and feet airbag massage).

6. Roller massage

The soles of the feet are equipped with roller massage, which can perform all-round acupressure massage on the soles and soles of the feet.

7. Various massage option

This product is designed with a variety of massage techniques: tapping, kneading, tapping synchronization, tapping, kneading, acupressure, with scraping and squeezing massage functions on the calf, allowing you to enjoy the services of a masseuse.

8. L-shaped ultra-long track design

The L-shaped super-long track design of this product makes massage more comfortable and more humane.

 


NOTE

- Do not disassemble the internal components of the product without permission to avoid the possibility of machine failure.
- Do not spill water or other liquids into the controller to avoid malfunction of keys or program errors. Do not crush the controller or power cord with heavy objects.


Move method

- Install Controller Components
- Connect the data cable plug on the controller assembly to the connection socket on the upper right side of the armrest bracket (pay attention to the concave and convex points between the plug and the socket); then turn the locking nut on the plug clockwise to tighten. (ref Image)

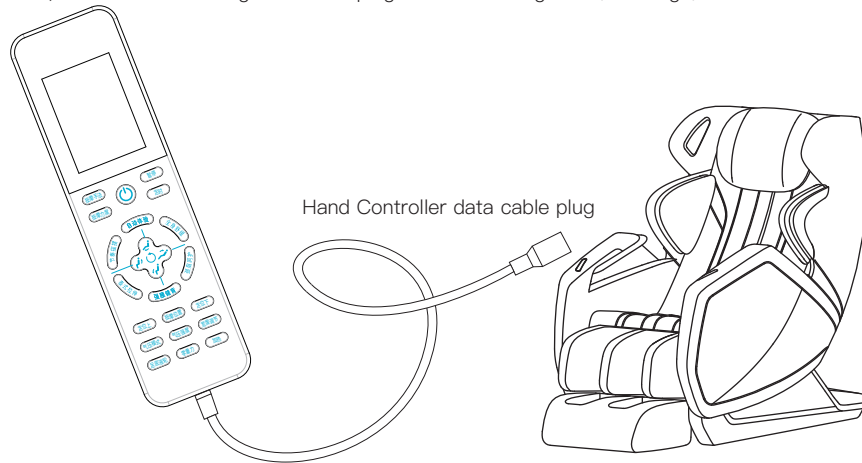

Other accessories

 
- First connect the other end of the power cord with the power jack on the power box under the backrest.
- Then insert the power cord plug into the 220V socket turn on the power switch at the bottom of the right armrest, and enable the controller to use.

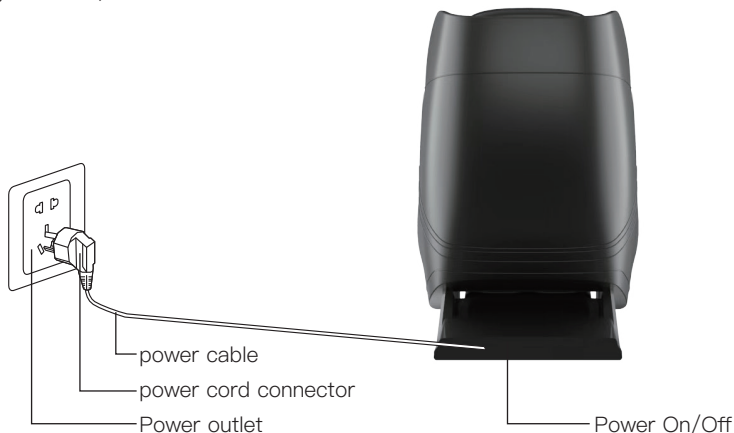

Installation Location

Safe distance around the massage chair:

 - Please place this product in a position with sufficient space: the horizontal distance between the backrest frame rising to the highest and the bottom is 20 cm, the horizontal distance between the calf frame rising to the highest and the whole machine moving forward and the horizontal distance to the bottom 30 cm, Make sure to keep a distance of more than 20 cm behind the product and more than 30 cm in front of the product.
- Keep a distance of more than 1 meter from TV, radio and other Audio visual equipment to prevent signal interference.

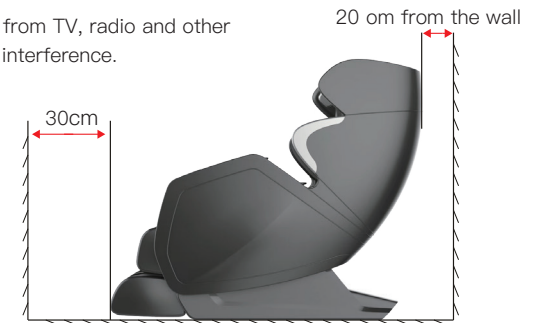

Floor protection

- Before use, it is recommended that you lay a cushioning medium such as a carpet under the massage chair to avoid making noise with the floor or damaging the floor.



Surroundings



Ground

Do not place the massage chair in a damp place (such as a bathroom) to prevent: the machine from being damp and causing electricity leakage.



Do not place the massage chair near a high temperature source (such as a stove) to avoid fire or damage to the skin.



This massage chair is a Class 1 electrical appliance, so be sure to use a three core power socket. please make sure that the ground wire on the power socket is well grounded to avoid electric shock and the other adverse consequences due to leakage during use.

Packing list

1.1 copy of the certificate. 2. 1 copy of the warranty card. 3. Quantity of material parts and fuses.